


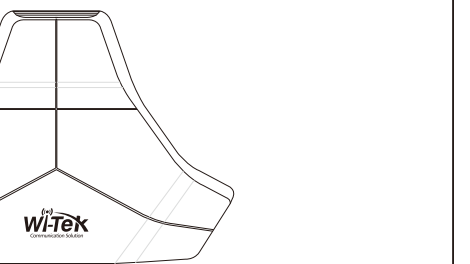

WI-AP719MP

Wi-Fi 6 Wireless Indoor Mesh Access Point with PoE Out
Quick Install Guide


Package content



X1




1 x Power Cord

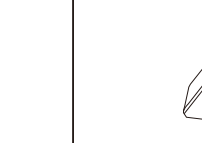

1 x 48V PoE adapter



1 x Ethernet Cable

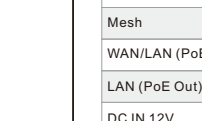

1 x Quick Installation Guide


Interface and Indicators

• LED Indicator Instructions




LED	Description
Blue light blinking	Initializing or pairing
Green light	It has been configured and works normally
Red light	Mesh signal is not good
Reset	Blue and green twinkling

• Ports Instructions

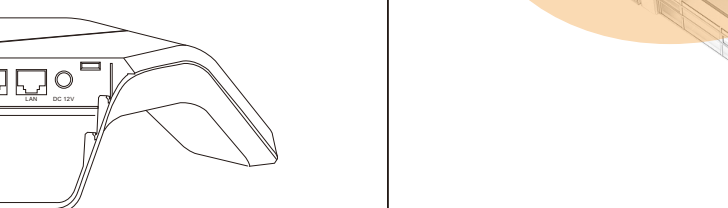

Interfaces	Description
Reset	Long press for 8 seconds to restore the factory default configuration.
Mesh	Press and hold for 3-5 seconds to perform Mesh search.
WAN/LAN (PoE IN)	For connecting to a modem or an Ethernet outlet.
LAN (PoE Out)	For connecting your PC or other wired devices to the router.
DC IN 12V	12V 1.5ADC Input

Mesh Wi-Fi Network Application

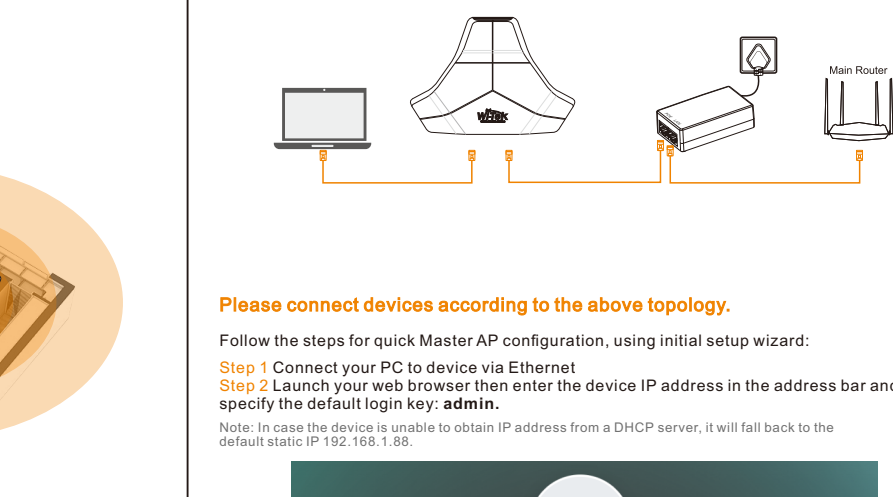


Please connect devices according to the above topology.

Follow the steps for quick Master AP configuration, using initial setup wizard:

Step 1 Connect your PC to device via Ethernet

Step 2 Launch your web browser then enter the device IP address in the address bar and specify the default login key: **admin**.

Note: In case the device is unable to obtain IP address from a DHCP server, it will fall back to the default static IP: 192.168.1.88.

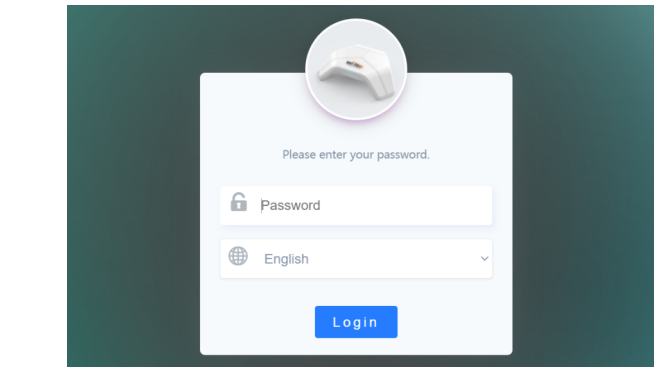


Master Node AP Configuration

Step 3 Choose the device operating work mode **AP** and click **NEXT** button.
Note: SD-LAN function is not available in AP mode.




Step 4 The Internet Protocol is set to **DHCP Client** obtain an IP address, which can automatically obtain an IP address from the upper-layer router. Click **NEXT** to set the wireless parameters.

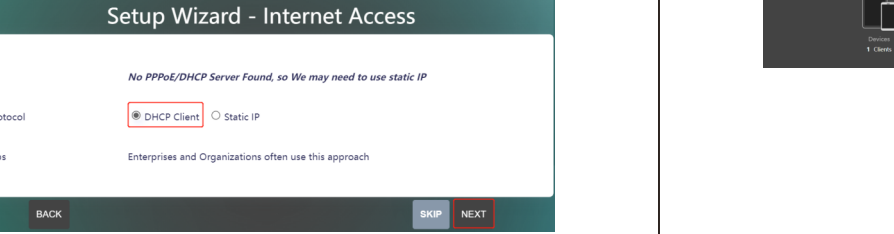


Step 5 Set the WiFi SSID and Key and click the **NEXT** button to complete the setting.




Add Slave Node AP Configuration

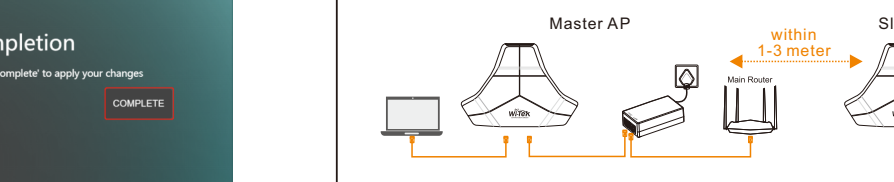


Step 1 Click **Add Edge AP** button to jump to the Mesh settings page.

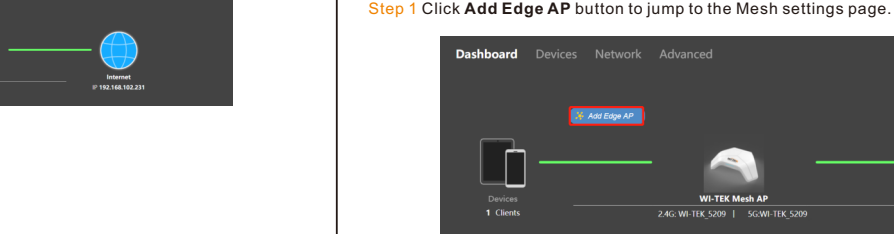

Step 1 Click **Add Edge AP** button to jump to the Mesh settings page.

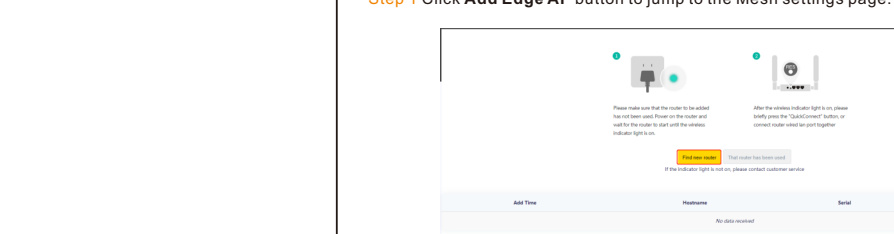

Master Node AP Configuration

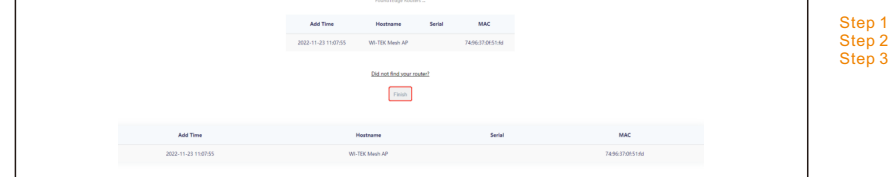

Step 4 The Internet Protocol is set to **DHCP Client** obtain an IP address, which can automatically obtain an IP address from the upper-layer router. Click **NEXT** to set the wireless parameters.



Step 5 Set the WiFi SSID and Key and click the **NEXT** button to complete the setting.




Cloud Management Settings

Step 1 Launch your web browser then enter <http://cloud2.wireless-tek.com> in the address bar.


Step 2 Register an account password by user name or email.

Step 3 Log in to the cloud account with the account password after registration.

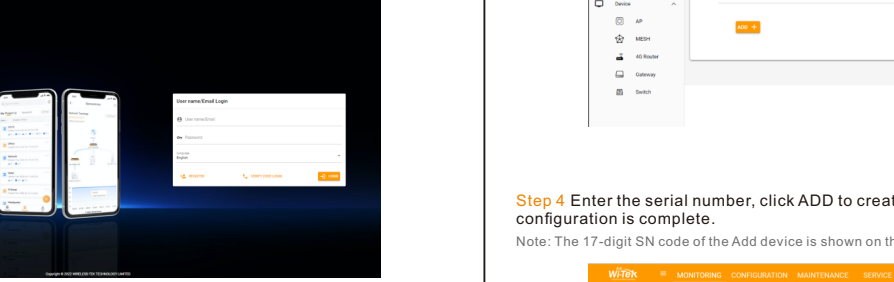


After the login is successful, the steps to bind the device to the cloud account are as follows:


Step 1 Click **ADD NETWORK**

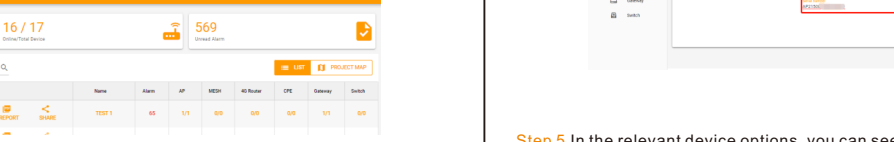


Step 2 Fill in the group name and location, and click save.

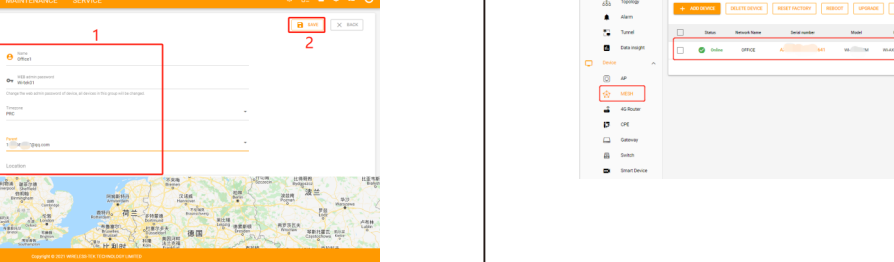


Add Slave Node AP Configuration

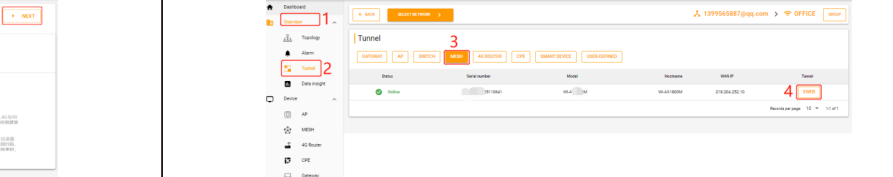

 
Step 1 Click **Add Edge AP** button to jump to the Mesh settings page.



Step 1 Click **Add Edge AP** button to jump to the Mesh settings page.

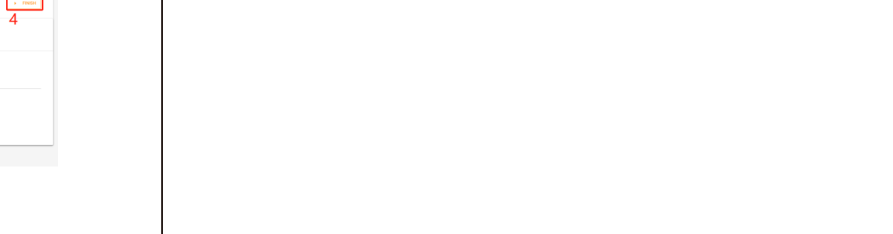

Step 5 In the relevant device options, you can see the bound device information.

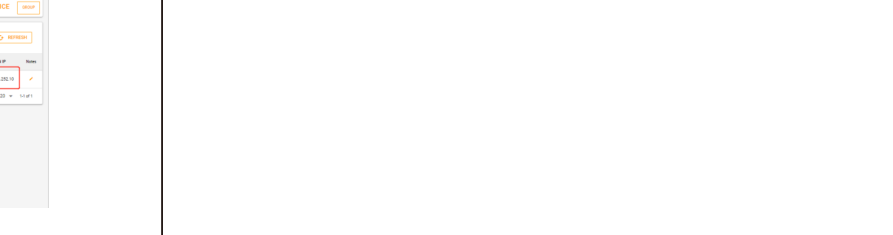

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Biaofang Technology Building 402, Bao'an street,
Baoan District, Shenzhen City, Guangdong, China
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

