


# Mounting Instruction for F QM – TrueDrop™

Item no. 99909911, 99909912, 99909913, 99909914

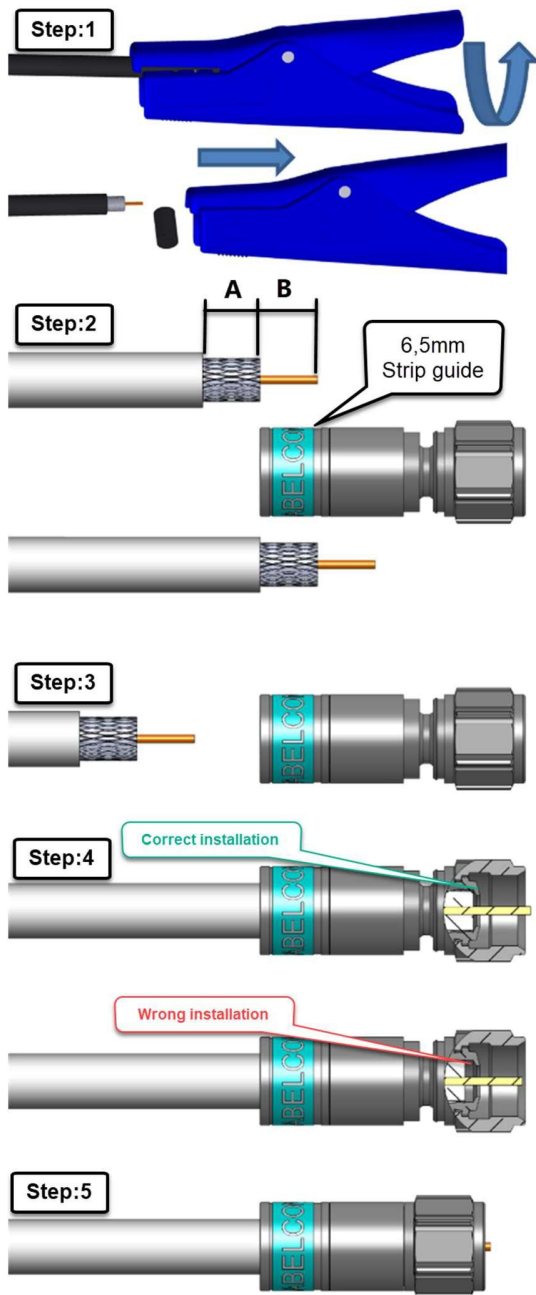

## Step 1

Strip the cable.

Cut and remove the outer braid and foil. Leave only the first layer of braid (if needed, adjust cable stripper accordingly). Clean the cable inner and outer conductor with a conductor cleaner or any other appropriate equipment.

For your safety and best results Corning Cabelcon's pre-adjusted Cable Stripper is recommended. Don't forget - read the enclosed user instruction before using the tool.

## Step 2

Verify stripped dimensions by using cutting guide on the connector.

A = 6,5mm (outer conductor)

B = 6,5-8,0mm (inner conductor)

## Step 3

**DO NOT FOLD BACK THE BRAID.**

## Step 4

Push the connector over the cable and allow braid to slide into the front of the connector.

Notes; **Do not bend the braid back**

## Step 5

Compress the connector by using the recommended Corning Cabelcon's compression tool

Tools and Accessories	Item No.
CABLE STRIPPER ROTARY RG 6/59/MINI.	98501010
CABLE STRIPPER RG6/59 W. HEX 11 SPANNER	98501040-02
CABLE STRIPPER I/D RG6/59 WB FOR INDOOR PVC CABLE	98501083
CABLE CUTTER DROP RG59/6/11 CCS	98028619-01
CONDUCTOR CLEANER CC-200EUR	98500903
TORQUE WRENCH AH HEX 11mm 4,5NM	98029080-01
COMPRESSION TOOL CX3 ALL SIZE F. BNC & IEC for RG6/7/11/59	98029072-01
COMPRESSION TOOL CX3 RG59/6 WB	98029046
COLOR MARKING CX3. BLACK/BROWN/RED/ORANGE/YELLOW/GREEN/BLUE/VIOLET/GREY/WHITE/TURQUIS	990040**

© 2020 Corning Incorporated. All Rights Reserved.

ISO 9001 certified

**CORNING**

Corning Optical Communications ApS,  
 Industriparken 10, DK-4760 Vordingborg  
 Tel: +45 55 98 55 99 Fax: +45 55 98 55 04  
 E-mail: [cabelcon@corning.com](mailto:cabelcon@corning.com) [www.cabelcon.dk](http://www.cabelcon.dk)